INDICATOR POST WALL TYPE


Fig No.: WPO365

MATERIALS LIST

Name	Material
Eye Bolt	ASTM A105
Hex Nut	ASTM A105
Handwheel	ASTM A536
Handwheel Washer	ASTM SS304
Drive Square Head	ASTM A536
Dust Cap	EPDM
Retainer Ring	65Mn
Cylindrical Pin	ASTM SS304
Drive Screw	ASTM SS304
Upper Tube Body	ASTM A536
Window Pressure Cover	ASTM A307B
Indicator Window	Lexan - unstabilize
Hex Bolt	ASTM SS304
Flat Washer	ASTM SS304
Indicator Window Sealing Ring	EPDM
Sign - OPEN / SHUT	ASTM 2024
Flange	ASTM A536
Square Tube	AISI 1045 Galvanized
Bakelite Handle	Parts
Plug	ASTM SS304
Cotter Pin	ASTM SS304
Flat Washer	ASTM SS304

Note : Internal and external fusion bonded epoxy / polyester coating to RAL3002 (specify on order).



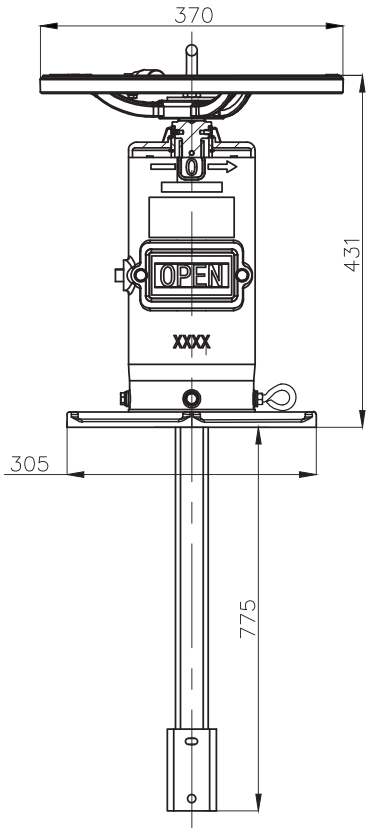

FIELD ADJUSTMENT

1. Remove the top section from the top of the Indicator Post assembly.
2. Set the “OPEN” and “SHUT” targets for the apporpriate valve size.
3. Reattach the Top Section to the top of the Indicator Post assembly.

Fivalco reserves the right to alter the information in this document without prior notice. Fivalco shall not be liable for technical errors or omissions contained herein.
Images are for illustrative purposes only. Refer to local sales representatives for detail catalogues, technical data and specifications.